

OZZ RL2 65

88506

Before installation

1. Before installation, check local laws and regulations, as well as those of any regions your vehicle may travel to, to ensure the auxiliary lights comply with all requirements.
2. Carefully read all installation instructions prior to beginning.
3. Verify that the dimensions and weight of the lamps and devices are suitable for your vehicle.
4. A small amount of internal moisture may occur but will be expelled through the vent after 2-4 operating cycles.
5. Operating Voltage: 10-30V DC.

Mounting

1. Firstly, verify that all the components and accessories are included in the box. Test the lamp before installation.
2. Connect black cable to ground (-).
3. Connect red cable to positive (+).
4. To synchronise multiple units (max 8 pcs) connect the white cable together, and keep connected otherwise units will fall out of sync.
5. To switch between day and night mode, apply the white cable to positive (+) for 1 second, and then release.
6. Bracket mounting, see figure 02.

Wiring connections & Functions

Red: Reverse light, +
Black: Negative, -
Yellow: Amber warning light, +
White: Day/night mode switch/Synchronisation, +

Please note!

Do not use the product if the lamp housing or lens is damaged upon removal from the packaging.

Ensure the power is turned off during installation.

Figure 01

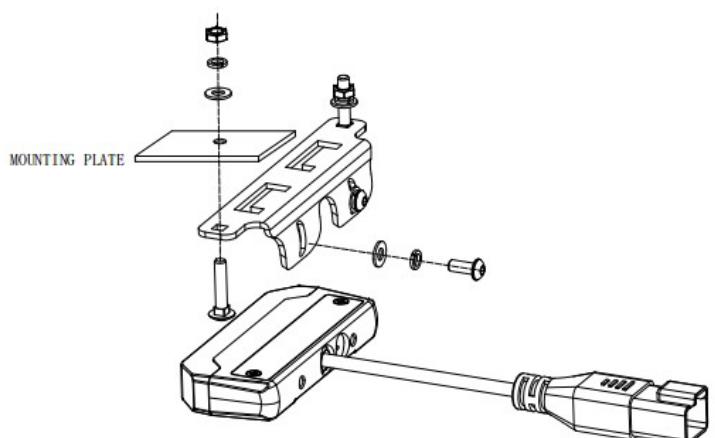


Figure 02

