



AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)

## FITTING INSTRUCTIONS FIT1264\_1


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

### BONNET GUARD FORD TRANSIT CUSTOM 2024+


### BG649D & BG672D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 1 pre-drilled holes in the Bonnet Guard that correspond with the slot holes in the underside of bonnet.
3. Fit plastic grommet to the slot hole
4. Fit Bonnet Guard in position (between the rubber weather-strip and the car bonnet) and fasten securely with supplied screw.  
Note sequence as per diagram as below.

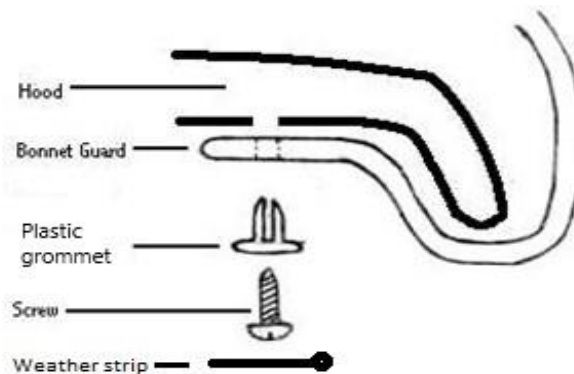

5. Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

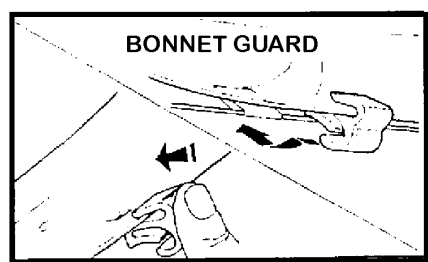

Wash acrylic with a mild soap and lukewarm water solution, using a clean, soft cloth or sponge.