



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

FITTING INSTRUCTIONS FIT1078

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


ISUZU DMAX 2020+

BG611


MADE IN NEW ZEALAND

1. Clean and open bonnet.

2. Fit Bonnet Guard in position & fasten securely with 2 supplied plastic "push pin" and screw.

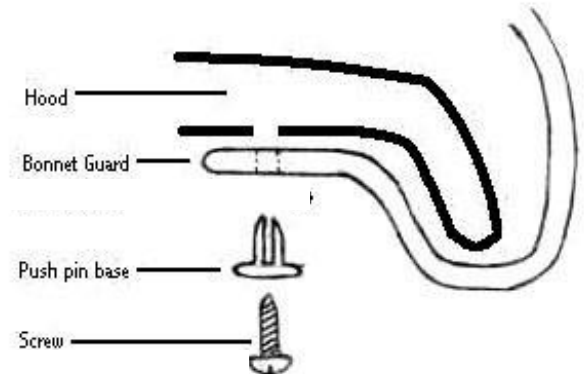

3. Fit the plastic "W" clips to the 4 holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

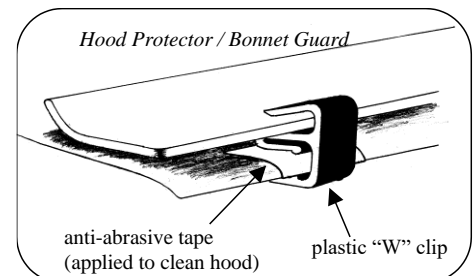

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET PROTECTOR.***