



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

FITTING INSTRUCTIONS FIT1079


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

TOYOTA HILUX 2021+


BG618

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Apply 2 flat bump-ons in 2 places **ON** the bonnet 5mm above bonnet trim and approximately 200mm each way out from the center of the badge. See image below.
Use supplied alcohol wipes to clean the area first.

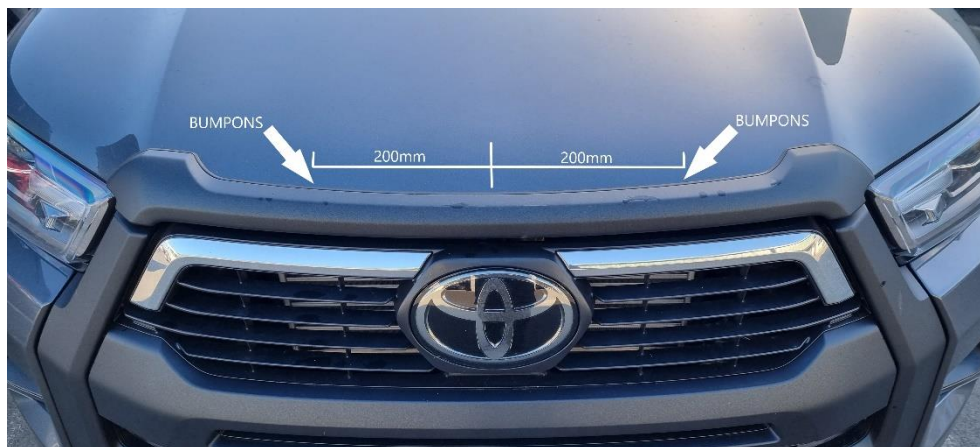

3. Test Bonnet Guard on the bonnet and note the 4 holes underside of bonnet that correspond with 4 pre-drilled holes in Bonnet Guard. Check bonnet guard sits flat on bump-ons
4. Fit Bonnet Guard in position and fasten securely with supplied plastic "push pins".
5. Close the hood by dropping from 6" height. Assist closing by pressing on the hood, but never press on the hood protector.

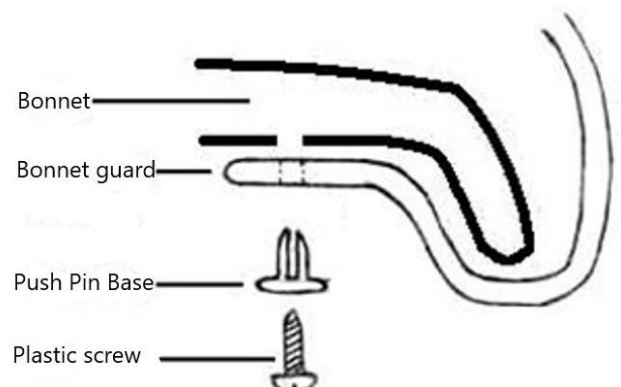

Install Video BG560DW: <http://www.airplex.co.nz/videos> or QR code

