


## FITTING INSTRUCTIONS FIT961

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


**VW CADDY 2016+**

**P/N BG564**

1. Clean and open bonnet.
2. Test Bonnet Guard on the bonnet and note the 4 holes in bonnet that correspond with 4 pre-drilled holes in Bonnet Guard.
3. Fit Bonnet Guard in position and fasten securely with supplied plastic "push pins".

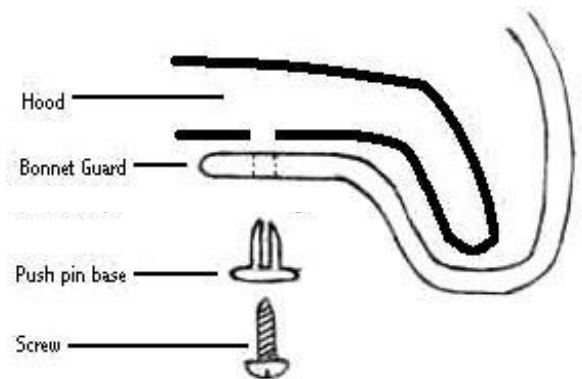

4. Fit the plastic "W" clips to the 2 holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

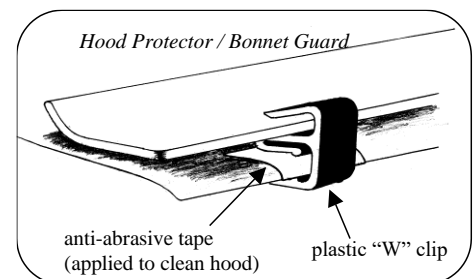

**Some vehicles will have a "rubber weather-strip" attached to the underside of bonnet. If so, insert the Bonnet Guard between the bonnet and the weather-strip**

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge. No authorization by or association with any automobile manufacturer is implied.