

FITTING INSTRUCTIONS FIT1293


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD VW T7 FACELIFT 2025+


BG674D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 2 pre-drilled holes in the Bonnet Guard that correspond with the slot holes in the underside of bonnet.
3. Fit plastic grommet to the slot hole
4. Fit Bonnet Guard in position (between the rubber weather-strip and the car bonnet) and fasten securely with supplied screw.
Note sequence as per diagram as below.

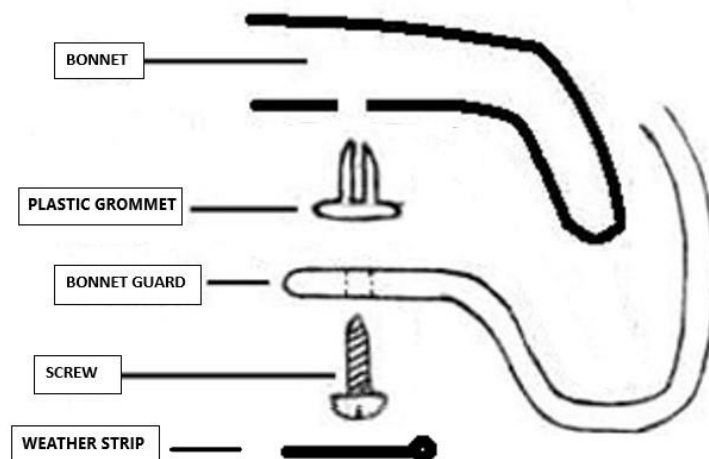

5. Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use alcohol wipe to clean the area first.
6. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

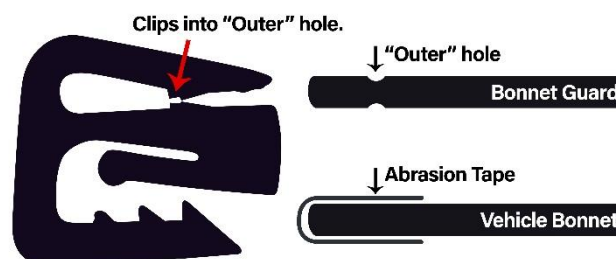

Wash acrylic with a mild soap and lukewarm water solution, using a clean, soft cloth or sponge.