V1. 05/18



... connecting to the aftermarket

CTSVW002.2

Volkswagen Steering Wheel Control Interface



Vehicle Application

VW Passat (B6, 3C, B7, 3C36) VW Golf (Mk5/Mk6) VW Touran VW Transporter VW Polo (9N, 9N3, 6R) VW Jetta VW EOS (1F) VW Tiguan (5N) VW Scirocco	2005 - 2015 2005 - 2015 2003 - 2015 2003 - 2015 2005 - 2014 2005 - 2015 2006 - 2015 2007 - 2015 2008 - 2015	VW Amarok (2H) VW Suran VW Vento VW Sagitar VW Magotan VW Fusca VW Touareg VW UP!	2010> 2009> 2005 - 2011 2005 - 2011 2005 - 2011 2005 - 2011 2010> 2011 - 2016
---	---	--	--

Key Features

- Retains Steering Wheel Controls
- Retains Factory Phone Buttons
- Provides Speed Pulse, Park Brake, Reverse Gear Outputs





The information provided in this document is subject to change without notice due to changes and/or improvements to the product/s.

ABOUT THIS PRODUCT

CTSVW002.2

CAN-Bus Steering Wheel Control Interface for Volkswagen vehicles with RCD200/300/310/ 500/510 original stereo and Quadlock connector

WIRING COLOUR CODES

Purple Purple/Black Green	Right Rear Speaker + Right Rear Speaker - Left Rear Speaker +	Yellow Black Red	Permanent 12V Ground Ignition 12V
Green/Black	Left Rear Speaker - Right Front Speaker +	Orange Pink	Illumination Speed Pulse
Grey Grey/Black	Right Front Speaker -	Green	Park Brake
White White/Black	Left Front Speaker + Left Front Speaker -	Purple/White	Reverse Gear
WITHE/ BIACK	Len rioni speaker -		

PRIOR TO INSTALLATION

Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are using during the installation to avoid damage to the vehicle or product. **Connects2 can not be held responsible for the installation of this product.**

TECHNICAL SUPPORT

Connects2 Ltd. want to provide a fast and suitable resolution to any problems encountered during installation of this product. To get in touch with our dedicated technical support team, please fill in a ticket at **support.connects2.com** and provide as much information as possible.



FITTING GUIDE

1. Remove and disconnect the original head unit.

2. Connect the 12 way molex connector of the head unit patch lead (supplied separately) to the interface.





3. Connect the opposite end of head unit patch lead to the head unit steering wheel control input on the back of the aftermarket head unit.

NB: This may be a 3.5mm jack plug or a wire input depending upon the head unit brand being fitted. Please see the head unit installation manual for further information on where to connect.

Important: This step must be completed before connecting power to the interface. Failure to so do may result in no steering wheel control function.



4. Connect the 14 way molex connector to the interface





5. Connect the male power/speaker ISO harness to the female power/speaker ISO harness from the aftermarket head unit. For aftermarket head units without an ISO connector, please refer to "Wiring Colour Codes" on Pg. 2.




www.connects2.com

FITTING GUIDE

6. Connect the female vehicle specific connectors on the harness to the male vehicle connector from the vehicle. Test head unit for correct operation.

STEERING WHEEL CONTROL FUNCTIONALITY

Config 1.

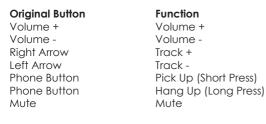



Config 2.

Original Button	Function
Volume +	Volume +
Volume -	Volume -
Up Arrow	Track +
Down Arrow	Track -
OK	Source
Star	Mute
Menu	Menu



www.connects2.com