


STEP 1

Cleanly cut the interconnect cable to the desired length. Trim and clean any loose or overhanging strands of shielding.



STEP 2

Loosen the set screw on the RCA connector so the screw cannot interfere with the cable jacket when inserting the cable into plug.

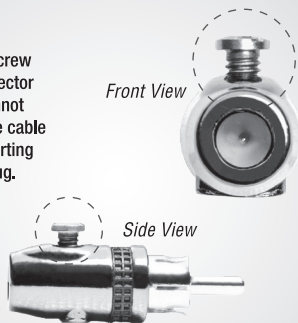

STEP 3

Push the cable into the RCA connector with a "screwing" action. Make sure the cable fully seats into the RCA connector. Tighten the set screw until you feel it firmly seat into the connector. Do not over tighten.



STEP 4

Test the center conductors and ground sleeves for continuity and shorts.





Z-WIRE RCA SYSTEM ASSEMBLY INSTRUCTIONS

DDAUDIO | DDAUDIO.COM
4025 NW 36th Street, Oklahoma City, OK 73112
(405) 239-2800