




Legend700

Steering Wheel Control



Tech Tip:

Legend700 Wiring Diagram

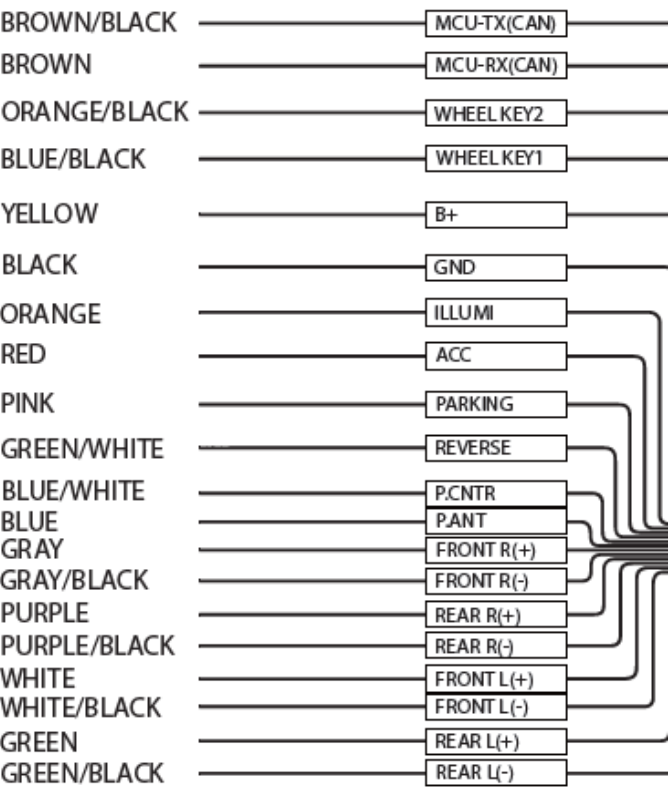

NOT USED

1- Set PAC SWC module Type: 7
Pioneer/Other or Set dip switches
as shown below.

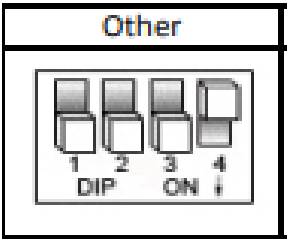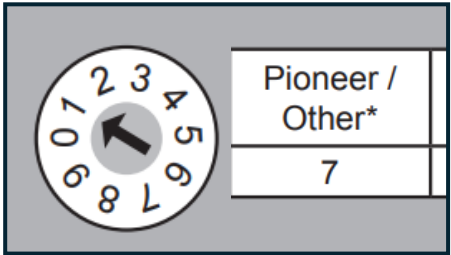


- 2- Wire **ORANGE/BLACK** to **BLUE/YELLOW** of the Pac module.
- 3- Proceed to SWC Program Menu (shown below) to set to your desired configuration.



Examples:



Legend700 Setting Menu:

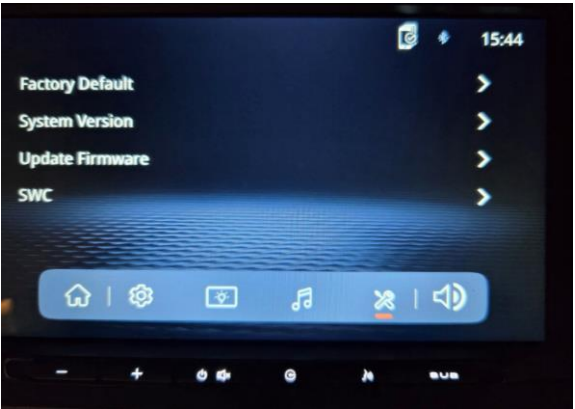

Legend700 SWC Program Menu:

