



### Fits Porsche Macan 2015-2020

Visit [MetraOnline.com](http://MetraOnline.com) for more detailed information about the product and up-to-date vehicle specific applications


#### KIT FEATURES

- ISO Double DIN radio provision
- Single DIN radio provision with pocket sold separately (part number 88-00-9004)
- Painted matte black


#### KIT COMPONENTS

- A) Radio trim panel • B) Radio brackets • D) #8 x 3/8" Phillips screws (4)

A

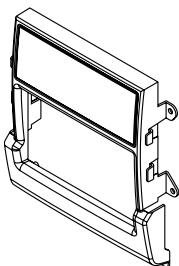

B

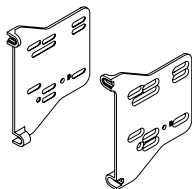

C



#### TABLE OF CONTENTS

Dash Disassembly .....	2
Kit Assembly .....	3

#### WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring harness: Visit [axxessinterface.com](http://axxessinterface.com) for audio/ video and steering wheel control interface options.

Antenna Adapter: 2015-2016 is 40-EU10, 2017-2020 is 40-EU56.


#### TOOLS REQUIRED

- 3mm Allen screwdriver • Long hook tool
- Panel removal tool • T-27 Torx screwdriver


**Attention!** With the key out of the ignition, disconnect the negative battery terminal before installing this product. Ensure that all installation connections are secure before cycling the ignition to test this product.

## DASH DISASSEMBLY

1. Unclip and remove the a/c vent panel to the left of the radio. (Figure A)  
**Tip!** A long-hook too can be inserted into the vent to grab it from the back.
2. Unclip and remove the passenger-side dashboard trim panel. (Figure B)

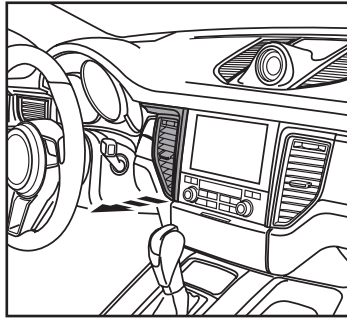


(Figure A)

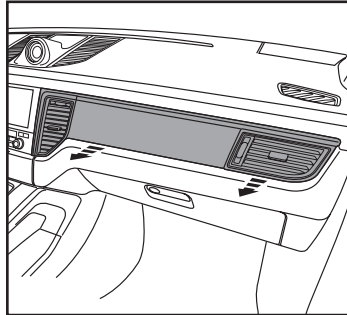


(Figure B)

3. Remove (4) T-27 Torx screws securing the radio. (Figure C)
4. Carefully remove the hinged door covering the DVD drive. (Figure D)
5. With the parking brake on, put the gear shifter in reverse to allow the radio to be removed in the following step.
6. Unclip and slide the radio assembly out, then unplug and remove.

*Continue to Kit Assembly*

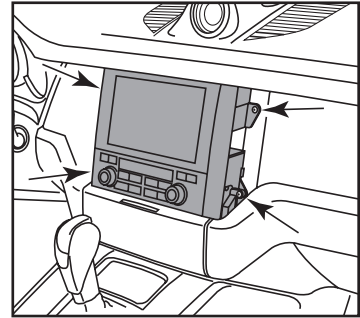


(Figure C)

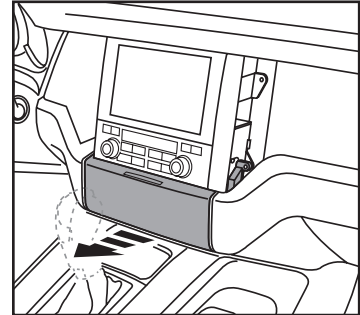


(Figure D)

## KIT ASSEMBLY

1. Attach the **radio brackets** to the **radio trim panel** using (4) #8 x 3/8" Phillips screws supplied. (Figure A)
2. Slide the radio into the completed assembly, and then secure it to the assembly using screws supplied with the radio. (Figure B)
3. Locate the factory wiring harness and antenna connector in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Test the radio and climate controls for proper operation.
4. Secure the completed assembly to the dash, using the factory hardware and reassemble the dash in reverse order of disassembly.

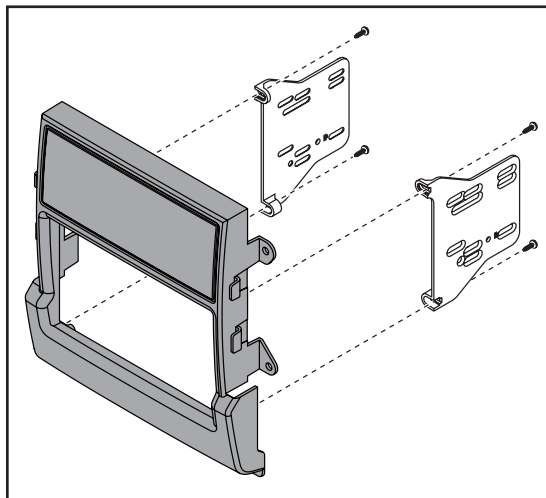

(Figure A)

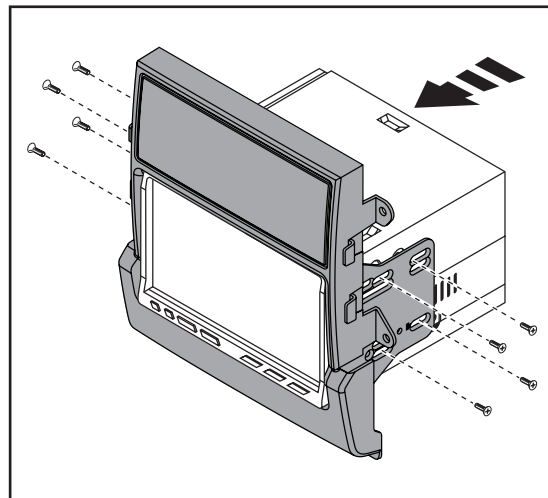

(Figure B)



**95-9617B**  
INSTALLATION INSTRUCTIONS



Having difficulties? We're here to help.



Contact our Tech Support line at:

**386-257-1187**



Or via email at:

[techsupport@metra-autosound.com](mailto:techsupport@metra-autosound.com)

**Tech Support Hours (Eastern Standard Time)**

Monday - Friday: 9:00 AM - 7:00 PM

Saturday: 10:00 AM - 5:00 PM

Sunday: 10:00 AM - 4:00 PM



**Metra recommends MECP  
certified technicians**