Mr12Volt CarPlay interface for PCM 3.1 Quick User Guide

Model No: P2000-PCM31MD

911

Boxster / Cayman

Panamera / Cayenne

Macan



- 1 All you need to know before Installation
- 2 Product Features
- **3 Main Feature Operations**
- 4 Car Settings
- **5 Sound Settings**
- 6 USB Supported Formats & Other Specs
- 7 FAQ


1 - All you need to know before Installation



- Mr12volt interface emulates factory TV function of a Porsche PCM radio and is connected through MOST bus of its function.
- No coding of factory TV module is needed, once Mr12volt module is successfully installed, the "TV" option will appear in the "TUNER" menu.
- If there is a factory TV module already fitted in the PCM radio, it must be disabled. (However, factory TV Module fitted is a rare option in the market)
- Dip Switch Configuration

| Porsche | 1 | 2 | 3 | 4 | 5 |
|---------|-----|-----|-----|-----|-----|
| PCM 3.1 | OFF | OFF | OFF | OFF | OFF |

2 - Product Features

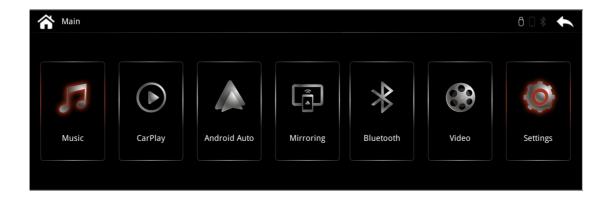

- Music & Video Playback (Through USB Flash)
- CarPlay
- Android Auto
- Mirroring
- Bluetooth HF & Music Streaming
- Reverse Camera Input (Support up to AHD720P)
- Front Camera Input
- Passenger Side L/R Camera Input (For the use of Blind Spot)
- Reverse Grid Line
- Digital Sound Processor (DSP) with 15 Band Equalizer Adjustment
- Software Update available

3 - Main Feature Operations

CarPlay/Android Auto

- Support both wired and wireless CarPlay
- To connect to CarPlay wirelessly, both Bluetooth and Wi-Fi connection are required
- For wired CarPlay & Android Auto: Use a genuine cable to connect through the USB/Lightening connector. Wi-Fi & Bluetooth connections are NOT required in a wired connection.
- → How to connect CarPlay: Search for Mr12volt_xxxx and pair to make a Bluetooth connection ---> Turn on Wi-Fi and & use CarPlay ---> it will start CarPlay on your screen after few seconds, it could take up to a minute for a first time connection.
- How to connect Android Auto: Search for MR12volt_xxx and pair to make a Bluetooth connection, Wi-Fi on phone will be on automatically connected to Android Auto

Mirroring



iPhone

- 1. Disable CarPlay by turning off Bluetooth & Wi-Fi Connection on your phone
- 2. Enter Mirroring menu on car display and choose iPhone

- 3. Turn on Wi-Fi on phone, connect to "carplay_xxxx" (PW is 88888888)
- 4. Go to Apple quick menu bar, select Screen Mirroring and select Mirroring again
- 5. Phone display will appear on Car Display now

Android Phone

 It is necessary to install "MLink" application on your Android phone, it can be downloaded on www.mr12volt.com (Go to SUPPORT ---> Download ---> P2000 mirroring)




- Both Bluetooth & Hotspot connection are needed at all time for mirroring
- ♦ Hotspot Setting :
- 1. 5GHz band must be selected
- 2. Enter Mirroring menu on car display and choose "Android"
- Network name & Password on phone must be set same as shown on Mr12volt "Mirroring" menu
- 4. Open M-Link app-->turn on Bluetooth and Hotspot
- 5. When both Bluetooth and Hotspot are successfully connected, Phone display will appear on Car Display
- It is always best to open mirroring menu on car display prior to the connection of Bluetooth, so that Android Auto does not overtake the function of mirroring when first connected to Bluetooth

Bluetooth

- Phone contact list
- Contact history
- Dial Pad
- Audio Streaming

BT Hands-free

- When a call is incoming, answer and reject button will appear on display, use MMI/i-Drive/Rotary button to select.
- PCM Bluetooth HF and Mr12volt Bluetooth can be connected at the same time. (see below picture) When both are connected and a call is received, PCM HF will take over Mr12volt HF and it can be answered through phone button on steering wheel.

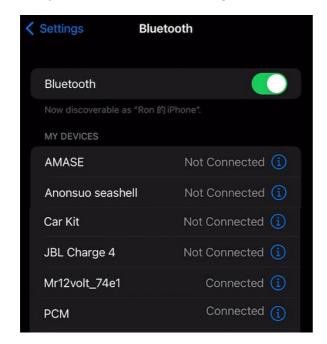

Mr12volt Does not support the integration of OEM microphone even with the installation of a Y-cable. if you need to use Mr12volt HF or Voice Command such as SIRI, the 3.5mm jack microphone supplied in the package must be installed.

4 - Car Settings

Car Setting



"Reverse Camera" settings

- OE Camera (Default) Select this when car is fitted with factory camera
- AfterMarket 360 Select this when car is installed with a aftermarket camera (support up to AHD720 only)



"Reverse condition" settings

- Gear Position (Default) Detects through CAN bus when car is in reverse.
- Reverse State Detects through 12v reverse light signal when reverse (requires the manual wiring connection of a car reverse signal)



When do i select "Reverse State"?

Mr12volt detects Car CAN bus with most of the car models in the market, however in some cases particularly in older generation cars, when CAN bus can't be detected, it is necessary to manually detect camera through car reverse light signal.

(Refer to the Porsche PCM3.1 Installation Diagram for more details)

"Starting front view" - Front Camera timer setting with 5s, 10s, 30s



"Dedicated right view" - L/R Side camera setting (Blind Spot camera)

- Can Active Detects through CAN bus
- 12v Active Detects through 12v side L/R light




"Reverse track" - Option to turn ON / OFF of a Parking Grid (For AfterMarket camera only)


"Reverse Radar" - Option to turn ON / OFF of a Reverse Sensor (For AfterMarket Reverse sensor only)

5 - Sound Settings

Sound Settings

- DSP Built-In
- Bass / Mid / Treble level adjustment with 15 bars customization
- Factory default at Flat

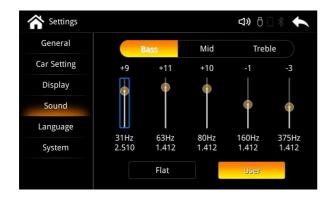

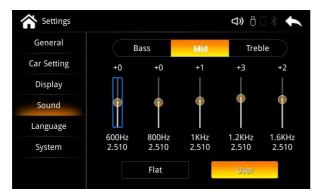



6 - USB Supported Formats & Other Specs

Music and Video Playback File Format

- USB file format FAT32
- Support USB2.0 , Hard disk memory
- Supported music format : MP3, WMA, AAC, AC3, DTS, OGG, FLAC, APE,
 AMR
- Supported video format: mkv, mp4, avi, wmv, rmvb, rm, mpg, mpeg, ts, dat, asf, flv, vob
- Supported Photo format : BMP, JPG, GIF, PNG
- DOES NOT support folder management when browsing USB Music and Video files

Other Data

- Support Phone Charging through USB connector @ 500mAh
- Support Loss-less Apple music through wireless

7 - FAQ

Q: I have a CDR31 radio, does it work?

A: It does not work on CDR31, it works on PCM3.1 only

Q: I have a non BOSE system, does it work?

A: It works on all PCM3.1 radio regardless if it's a Bose system,
Burmester system or Standard system

Q: Do i need any coding for my PCM3.1 radio?

A: No coding or factory TV module is needed, Mr12volt CarPlay module triggers TV option after connecting to PCM radio, "TV" icon will appear in the "TUNER" menu right away.

Q: What if i have a factory TV module fitted?

A: Factory TV module must be disabled in this case, use a loop connector to bypass the TV module. It could be purchased from mr12volt website.

Q; Can i use my PCM Bluetooth HF while connected to Mr12volt Bluetooth?

A: Yes, they can be connected at the same time, PCM HF will take over Mr12volt when a call is coming in and it can be answered through phone button on steering wheel.