

ZXMSP2

SOT Cable



ZXM500.1



Speaker Wire






Installation Tools Required

Vehicle used for installation:*


Polestar 2 (2019 ->) Harman Kardon

*Some differences may occur between different car and year models.

8mm Wrench or Socket

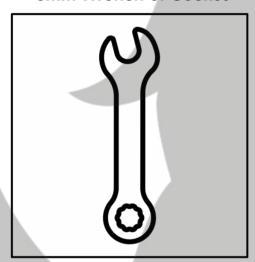

Plastic Pry Tool

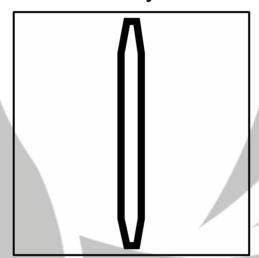





1. Remove the luggage floor



3. Unscrew the two bolts




2. Locate the two bolts




4. Pull up the threshold to remove it





5. Remove the luggage mat

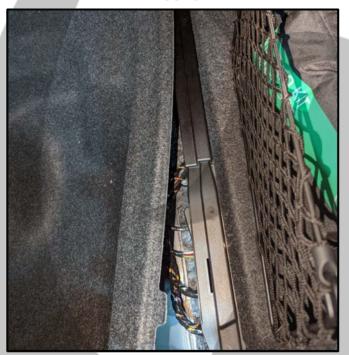

7. Left side panel pulled out



6. Pull out the left side panel



8. Remove the two clips




9. Disconnect the connector




11. Connect connector to SOT cable



10._ Connector disconnected

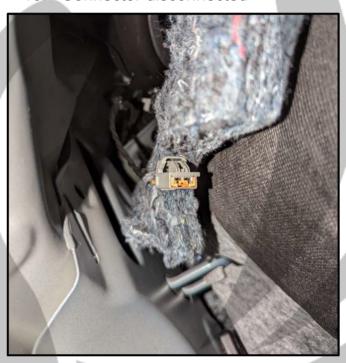

12. Route SOT cable under the carpet

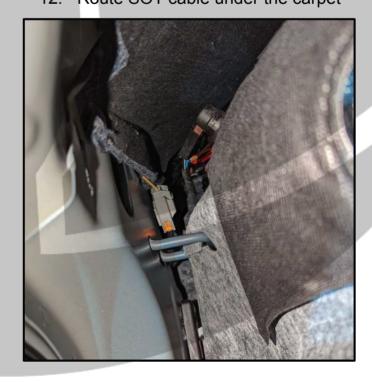

13. Route SOT cable under the panel



15. Route the cable at the back



14. Cable routed under the panel



16. Cable tie the cable at the back



17. Amp at the right side of the trunk




19. Connect SOT cable to connector




18. Disconnect the power connector




20. Connect SOT connector to amp

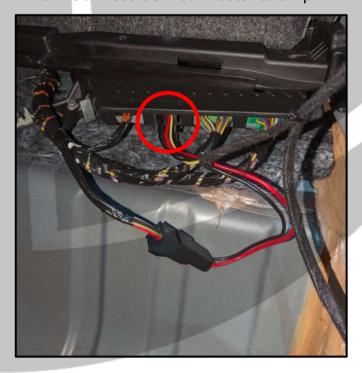

21. Route SOT to the front of the trunk

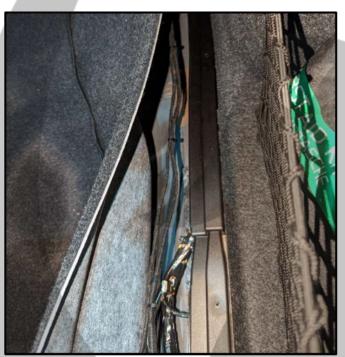


23. Install the cables to the ZXM500.1

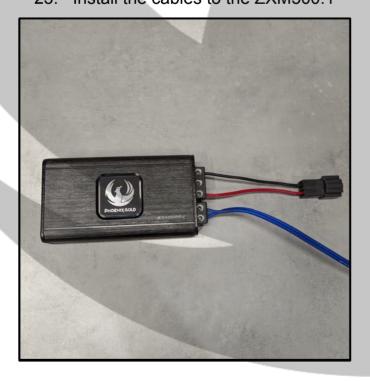

22. Put back the trunk carpet



24. Connect ZXM500.1 in the car

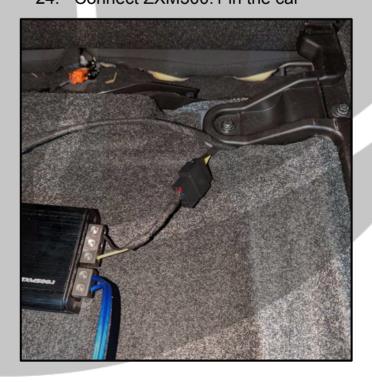

21. Connect the high-level connector



23. Reassemble trunk in reverse order



22. Run speaker wire to subwoofer



24. Install is now complete



On Behalf of the Phoenix Gold team, Thank you for choosing us!

Your installation is complete and we hope that your new upgraded system will bring you joy and happiness for many years to come when listening to your favorite music. As always, our goal is bringing you The Gold Standard in Sound.

