


Pioneer

Installation guide for :

- SPH-EVO950DAB-D8
- SPH-EVO107DAB-D8
- SPH-DA97DAB-D8



Fiat Ducato 8 - model year '21 onwards Open dash only

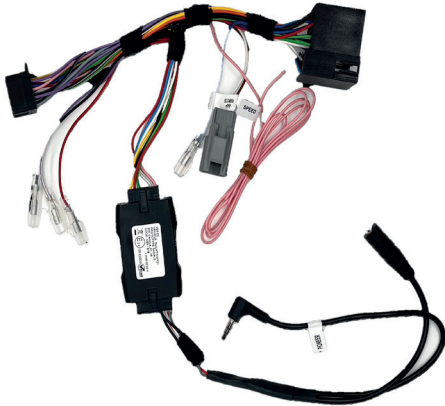

Interface

Depending on the kit, the interface may look different



Pre-assembled SPH-EVO950DAB unit with
Ducato 8 installation kit



Original dashboard setup
Remove the two storage pockets



Remove the airvents left an right by pulling
They are attached with two pins



Remove four screws using a T20 screwdriver
Keep them a side for later




Remove the original frame from the dashboard

Pioneer

ATTENTION!


In order to prevent ESD damage, the STEERING WHEEL REMOTE JACK must be connected before plugging in the connectors on car side.

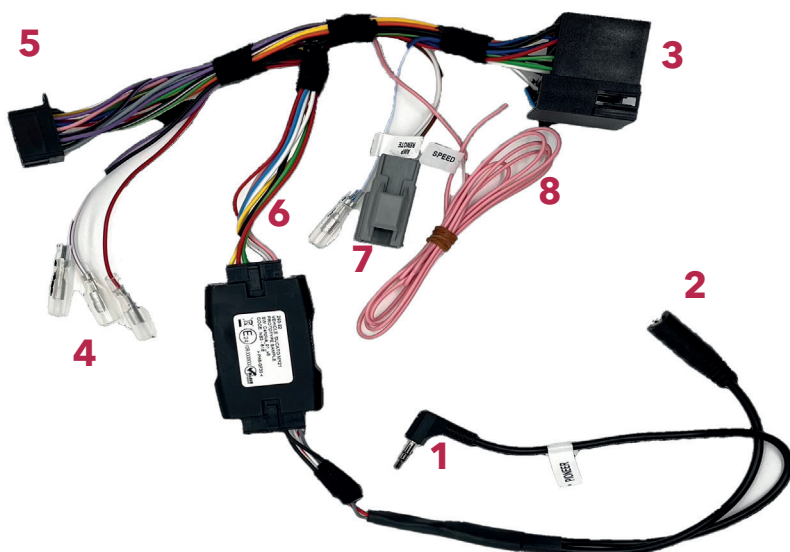

- 1 - Steering wheel control input - Connect to backside of Pioneer head unit - Step 11
- 2 - Wired input for optional remote (CD-ME300 or similar)
- 3 - Connect to the vehicle main ISO cable
- 4 - Violet/White - Reverse gear input - Step 7/8
Red - Optional 12v ACC supply
Black - Optional GND supply
- 5 - Pioneer head unit main power connector
- 6 - Remote output for optional external amplifier
- 7 - Phone button control - See step 11/12
- 8 - Speed pulse wire - See step 9/10



Open the fusebox underneath the steering column

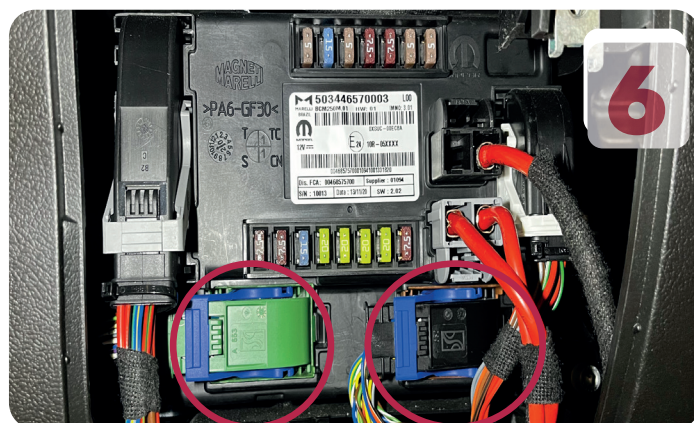

Locate the green and black connector and remove them




Open the green connector and slide the cables out



Connect the violet/white cable (reverse signal) to the white/blue cable in pin seventeen.




Open the black connector and slide the cables out

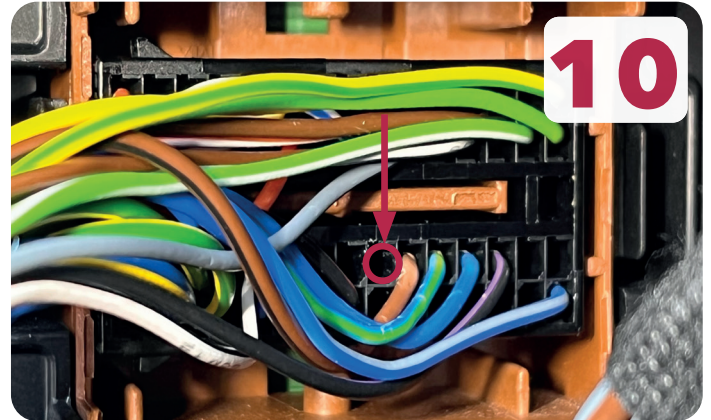

Insert the pink cable pin (speedpulse) to the open position twenty-two (22)



Connect all cables in the dashboard including FM & DAB with the included cables

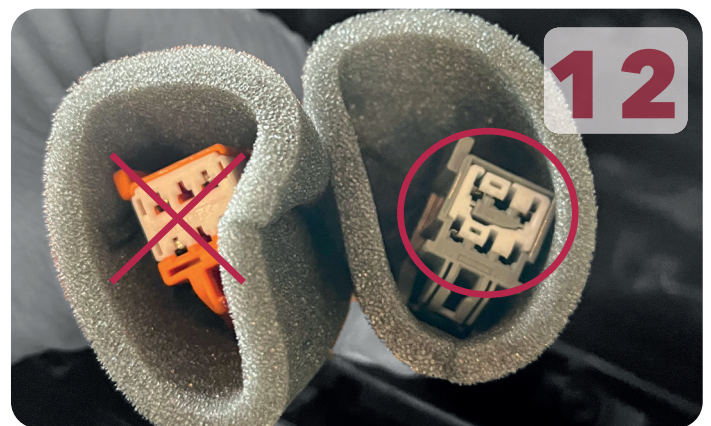

For phone buttons only use the GREY connector.
! DO NOT USE THE ORANGE CONNECTOR !



Insert the Pioneer head unit and secure with the original screws.



Re-install the airvents.