
SONOPOWER

USER MANUAL - IPS300MSW 300W Power Inverter

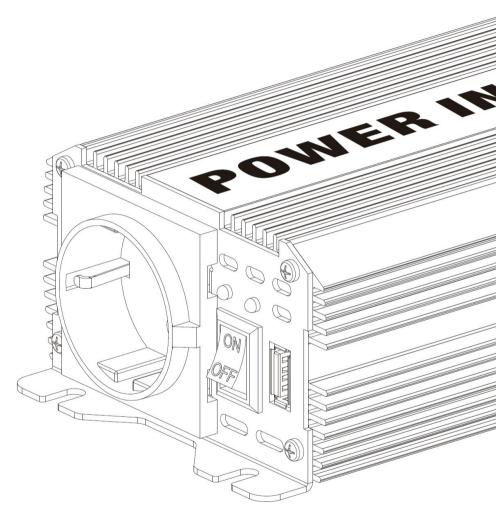

Contents 01 Product Overview and Accessories 02 Specifications 03 Wiring and Setup Instructions 04 Security, Troubleshooting and Waste Disposal 05 Operating Scope and Restrictions 06

Description

This inverter is a power conversion device that transforms 12V DC power from a battery into 230V AC power, allowing it to supply power to external devices. It is ideal for use in automobiles, boats, offices, telecommunications, public security, emergency rescue, and various other environments


Featuring an advanced internal circuit design, this inverter offers a compact and lightweight build with enhanced stability and high conversion efficiency. It includes five comprehensive protection features to ensure safe operation:


- Low Voltage Protection
- Overvoltage Protection
- Overload Protection
- Overheat Protection
- Short Circuit Protection

These safety features are designed to protect both your electrical devices and your DC circuitry.

Important: Please read this manual thoroughly before using the product to ensure safe and proper operation.

Product Overview

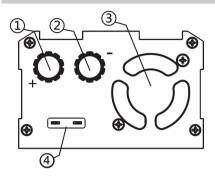

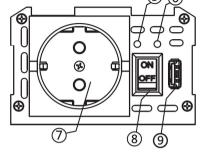

- 12V DC Input + (Positive) (Red)
- (2) 12V DC Input (Negative) (Black)
- (3) Cooling Fan
- (4) External Fuse
- (5) Power LED (Green)

- 6 Fault LED (Red)
- (7) AC Output Socket
- (8) Turn On/Off Switch
- 9 USB-A Port

Accessories



Cigarette Lighter Plug



Battery Clamp Cable

(The above pictures are for reference only, appearance depends on goods).

Specifications

Model:	IPS300MSW	
DC Input:	12V (11V-15V)	
AC Output:	230V ± 10%	
Output Frequency:	50Hz ± 3Hz	
Rated Power Output:	300W	
Peak Power Output:	600W	
USB Output:	5V DC, 2100mA	
Output Waveform:	Modified Sine Wave	
Efficiency:	>85%	
Idle Current Draw:	0.45A (12V DC)	
Working Temperature:	5 - 35°C	
Cooling Method:	Load-Controlled Fan	
Low Voltage Alarm:	10.2V - 10.8V DC	
Low Voltage Shutdown:	9.2V - 9.8V	
Overvoltage Shutdown:	15V - 16V	
Overload Shutdown:	360W - 460W	
Fuse:	40A (External)	

Wiring and Setup Instructions

Important: Before operating this product, please read the setup instructions carefully to ensure safe and proper use.

Cigarette Lighter Plug Installation

Recommended Power Range: 0 - 150W

- 1. Connect the black (negative) cable to the inverter's black (-) terminal.
- 2. Connect the red (positive) cable to the inverter's red (+) terminal.
- 3. Plug the cigarette lighter plug into your vehicle's 12V socket
- 4. Turn on the inverter using the power switch.
- 5. Wait for the green indicator light to confirm the inverter is ready.
- 6. Plug your device into the AC outlet on the inverter.

Important Note: When using the cigarette lighter socket in a car, please do not exceed 150W of power. Exceeding this limit can blow the fuse or, in severe cases, damage or destroy the vehicle's wiring.

Important Note: Do NOT reverse the positive and negative connections. Doing so will cause a short circuit and may permanently damage the inverter.

Battery Clamp Installation

Recommended Power Range: 0 - 300W

- 1. Connect the black (negative) cable to the inverter's black (-) terminal.
- 2. Connect the red (positive) cable to the inverter's red (+) terminal.
- 3. Attach the black (negative) clamp to the negative (-) terminal of the battery.
- 4. Attach the red (positive) clamp to the positive (+) terminal of the battery.
- 5. Turn on the inverter using the power switch.
- 6. Wait for the green indicator light to confirm the inverter is ready.
- 7. Plug your device into the AC outlet on the inverter.

Important Note: Do NOT reverse the positive and negative connections. Doing so will cause a short circuit and may permanently damage the inverter.

Security

- 1. To avoid electric shock, do not operate the device with wet hands.
- For safety, do not allow children to access or operate the device. This may cause injury or electric shock.
- 3. Do not insert metal objects into the inverter. This may cause electric shock.
- 4. Do not touch the metal part of a plug while inserting it into the inverter's socket.
- 5. Keep the inverter away from explosives.
- 6. Do not touch the inverter after extended heavy use. It may become very hot.

Troubleshooting

Protection Type	LED Indicator	Alarm	AC Output	Solution
Input Low Voltage Alarm	Green ON Red OFF	Yes	Yes	Restore the DC input voltage to the normal operating range.
Input Low Voltage	Green ON Red ON	Yes	No	Restore the DC input voltage to the normal operating range.
Input Overvoltage	Green ON Red ON	No	No	Adjust the DC input voltage back to the acceptable range.
Overload Protection	Green ON Red ON	No	No	Reduce the connected load to within the rated power.
Overheat Protection	Green ON Red ON	Yes	No	Allow the device to cool down to the safe operating temperature range.
Short Circuit Output	Green ON Red ON	No	No	Fix the short circuit, then disconnect and reconnect the inverter properly.

Waste Disposal

Do not discard it with regular household waste, as improper disposal may harm the environment. Instead, take it to a certified electronic waste recycling center or follow your local regulations for electronic device disposal.

Operating Scope and Restrictions

Supported Devices

This inverter is intended for use only with Class II devices

Unsupported Devices

- Devices that exceed the rated power of the inverter.
- Devices with capacitive or inductive loads, such as: Air conditioners, high-power electric drills, refrigerators, microwave ovens and blenders.
- Precision equipment that requires highly stable power supply. Using a modified sine wave inverter may interfere with accuracy or proper function.

USB Port Usage

- The USB port is for charging only. It does not support data transfer.
- Before charging, ensure that your device's charging current is lower than or equal to the USB port output current.
 Using a device that requires more current may damage the USB port.
- Some devices must be charged using their original chargers. Do not use the USB port to charge such devices.

Ventilation and Environment

- Use the inverter in a well-ventilated area and do not block the cooling fan.
- Keep the inverter dry: do not use in rain or high-humidity environments.
- For longer lifespan, operate the inverter at no more than 85% of its rated capacity.

Protection Features

- Low Voltage Protection
- Overvoltage Protection
- Overload Protection
- Overheat Protection
- Short Circuit Protection
- If any of these issues occur, the inverter will automatically shut down.
 Once the issue is resolved, the inverter will resume normal operation.

Using Extension Cables

 If longer power input cables is necessary, use high-quality cables with appropriate thickness to minimize voltage drop.

SONOPOWER

MOBILE POWER SOLUTIONS

DESIGNED AND ENGINEERED IN SWEDEN.
SONOPOWER IS A PART OF SONOGROUP.
PLEASE VISIT SONOPOWER.SE
FOR MORE INFORMATION